


PIT-LINK GSM USER GUIDE

- 1. INSTALLATION:** Use the supplied zip-ties to fix the metal bracket onto the rollbar.
- 2. PTT AND POWER SUPPLY:** The amplifier is provided with a 4 poles cable, 2 poles for power supply and for PTT. In addition, a PTT button is included with 2m cable and loose ends.
- 3. HELMET CONNECTION:** Plug in Nexus connector/s from the helmet/s.
- 4. ON/OFF:** Use the lever switch on the left side of the amplifier to turn it ON/OFF.
- 5. BLUETOOTH:** The Bluetooth is automatically ON (blue). Turn on the Bluetooth on your smartphone and find PIT LINK to pair the devices.
- 6. CONFIGURE COMMUNICATION:** Please see the leaflet in the box to find the right communication setup.
- 7. SOUND:** On the left side, the higher the Noise Filter (see image), the more the noise is being cancelled. On the right side, the Voice settings can be changed. Find the right balance between the two to fine tune the amplifier.
- 8. RADIO:** It is possible to connect a radio via a 3.5mm connector on the amplifier side.
- 9. MENU:** Access the secondary menu to set additional volumes and features (see Menu). ➡

MENU

PRESS THE MENU ICON TO ACCESS ADDITIONAL SETTINGS.

- 1. DRIVER VOLUME:** Driver can hear him/herself at a lower volume by reducing the overall noise.
- 2. CAMERA CAR:** Set the output volume of the intercom to the car camera.
- 3. MUSIC VOLUME IN:** Set the volume of the music from the bluetooth
- 4. CALL VOL IN/OUT:** Set the volume of voice calls from the bluetooth
- 5. RADIO VOL IN/OUT:** Set the volume of the RADIO.
- 6. VOICE FEEDBACK:** It enables to hear yourself peaking as a feedback
- 7. VOLUME BOOST:** Activate with +/- to have additional power

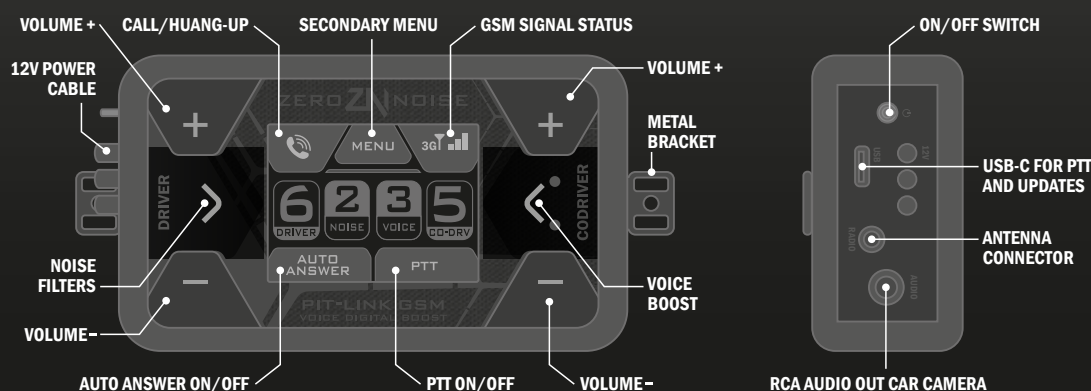

Scan for full instructions

WARNING: Zeronoise amplifiers are extremely powerful, the high volume can harm your ears. Use it appropriately. Your safety is our concern, but your responsibility.

READ ME!!! HOW TO MANAGE COMMUNICATION

PIT LINK GSM (Bluetooth) has different setups to support communication during tests and races, depending on the needs of the driver and the team. This can be managed with two functions on the touch screen: AUTO ANSWER, and PTT.

STANDARD USE: The amplifier is connected to a smartphone via Bluetooth and the communication is supported through GSM network (see User Guide to set it up).

TEST SESSION MODES:

PTT OFF	Press PTT for 2 seconds to recall last number been called by the paired smartphone. Press PTT to hang up.	AUTO ANSWER ON	Communication opens up automatically with incoming call.
		AUTO ANSWER OFF	Press PTT to pick up the incoming call.

RACE MODES:

PTT ON	Keep PTT button pressed (Push to Talk) to open microphone.	AUTO ANSWER ON	Communication opens up automatically with incoming call.
		AUTO ANSWER OFF	Press PTT to pick up the incoming call.

RADIO USE: The amplifier is connected to a radio via 3.5mm connector on the side of the amplifier. The PTT button is the one of the radio, and not the one of the amplifier. The amplifier is being used for noise cancelling purposes and not for connectivity.